



english | français | español | deutsch  
nederlands | italiano | português | polski

 
 
psa[fm

fm radio

 


Portable Sport Audio by **Philips**

 
1

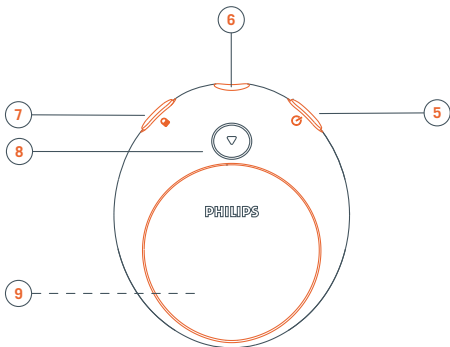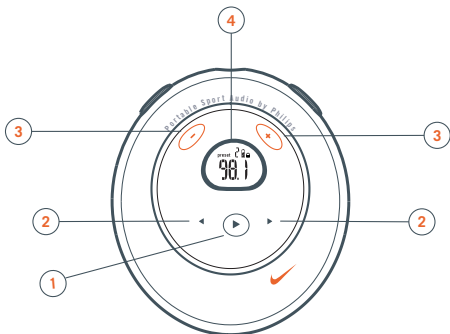

 
2

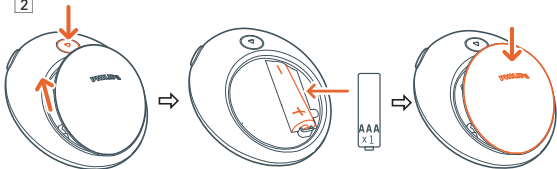

 
3

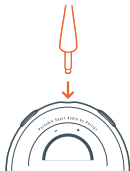

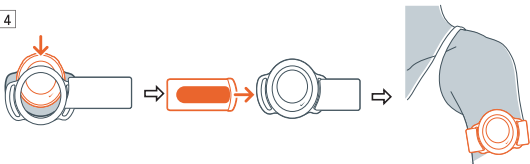


 


4



5



## controls (see figure 1)

- ①  .....selects / programs preset stations
- ②  /  .....tunes to stations
- ③ - / + .....adjusts the volume
- ④ **display**.....shows status of the set
- ⑤  .....switches the radio on / off
- ⑥ .....socket for 3.5mm headphones
- ⑦  .....locks buttons to prevent them from being activated
- ⑧  .....opens the battery latch
- ⑨ **battery compartment** uses 1 x AAA / R03 / UM4 alkaline

## supplied accessories

make sure these items are in the package. if any item is missing, please contact your dealer.

- one set of headphones, SBC HJ020
- one headphone extension cord
- one armband, AY3285
- one AAA alkaline battery

***the type plate is located inside the battery compartment.***

## power supply / accessories


### battery (see figure )

- 1 press ▼ (at the back of the psa) to open the battery latch and insert one **AAA** battery preferably alkaline as indicated.
- 2 insert lower edge of door as shown to close the battery latch.

### battery playtime

- 10 hours using AAA alkaline battery.

### indication of empty battery

the battery icon  appears when battery power is running low.

### IMPORTANT!

- remove the battery if: battery drained or the psa will not be used for more than 1 week.
- **batteries contain chemical substances, so they should be disposed of properly.**

## accessories

### headphone and extension cord (see figure )

connect as shown.

***note:** the headphone and extension cord also act as the fm antenna. position accordingly if you need to improve radio reception.*


### armband (see figure )

wear your digital audio player during sport activity by securing it to the supplied armband.

- 1 fit the psa into the rubber buckle with the headphone socket aligned to the socket hole.
- 2 position the armband round your arm. thread the strap and fasten up for a snug fit.

## power on / off, beep and volume - / +

### power on / off

press  to turn on / off.

display message: **on** or **off** respectively.

### smart power-saving mode

the power-saving mode will help you save battery power. if no controls on the psa are pressed during 60 minutes of playback, the psa automatically powers down after 60 minutes. even if the button lock is activated.

### *beep beep!*

when you press any control on the psa, the psa beeps in response.

***note:** the - / + controls are silent so as to not interrupt your listening pleasure.*

### adjusting volume - / +

press - / + to decrease / increase the volume.

display: **u0** (volume) and a number **00-16** indicating the volume level.

***note:** in case you've been out and about listening at high volume, the volume is automatically adjusted to start at a lower, comfortable volume, **u 10** when you next switch on the radio.*

## radio reception , presets

### tuning to fm radio stations

to help reception, make sure you have plugged in headphones and or the extension cord first.

#### manually

press ◀ / ▶ briefly and repeatedly to tune to stations.

display: the radio frequency, and if stations stored: **preset** and a preset station number, **1-10**.

#### automatically

press and hold ◀ / ▶ for 1 second.

display: shows **Srh** during automatic search tuning until a station of sufficient strength is found.

**note:** press any button if you want to interrupt / stop automatic search.

### storing preset stations

you can program up to 10 fm stations. if you like, you can also replace a preset station with another frequency.


- 1 tune to your desired station (see **tuning to fm radio stations**).
- 2 press and hold ▶. release ▶ when you hear 3 beeps.  
display: shows preset and a preset station number flashing.
- 3 use ◀ / ▶ to select your preset station number.
- 4 press ▶ to confirm your preset station number.  
you'll hear 2 beeps to confirm your station has just been stored.


### selecting preset stations

press ▶ once or more to find your preset station.

## button lock / general information

### using the button lock

 deactivates the other buttons so they are not activated accidentally.

to activate / deactivate the button lock, press 

display:  appears if button lock active.

### take care when using headphones

**hearing safety:** listen at a moderate volume. using headphones at high volume can impair your hearing.

**traffic safety:** do not use headphones while driving or cycling as you may cause an accident.

### general maintenance (see figure )

to avoid damage or malfunction:

- do not expose to excessive heat caused by heating equipment or direct sunlight.
- do not allow the psa to be submersed in water. do not expose headphone socket or battery compartment to water as water entering the set may cause major damage.
- do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.



## helpful tips

### helpful tips


*if a fault occurs, first check the points listed below before taking the set for repair.*

*if you are unable to remedy a problem by following these hints, consult your dealer or service centre.*



***warning: under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.***

### no display / sound

- battery weak / incorrectly inserted.
  - correctly insert fresh battery.
- buttons pressed too quickly.
  - slow down press firmly.
- headphones not properly connected.
  - insert headphone plug into socket completely.
- psa switches off by itself after 60 minutes.
  - this is not a problem, but the power-saving mode.

press the power on button  again if you want to continue listening to the radio.

### no reaction to controls

-  activated.
  - deactivate .
- electronic discharge.
  - remove battery and replace after several seconds.

## helpful tips

### poor fm reception

- weak signal.
- adjust the headphone or extension cord.
- battery weak.
- correctly insert fresh battery.

### **CAUTION**

***use this device according to the instructions that follow.  
failure to do so could be hazardous to your health.***

***this product complies with the radio interference  
requirements of the European Union.***

### **environmental information**

we have reduced the packaging to its minimum and made it easy to separate into mono materials: PET, PS, PE.

your set consists of material which can be recycled if disassembled by a specialized company. please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.



**NIKE**

SWOOSH



**PHILIPS**

© Koninklijke Philips Electronics N.V., 2002,  
Nike, Inc. 2002. All rights are reserved.

type number - ACT100